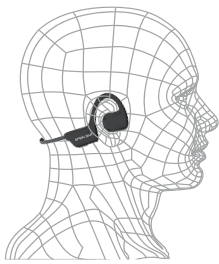 
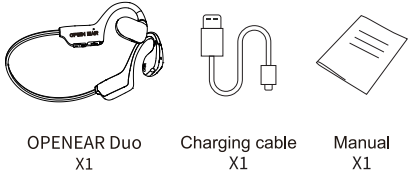 
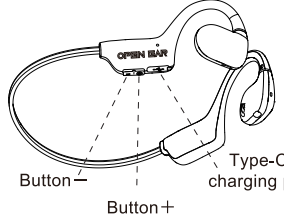 
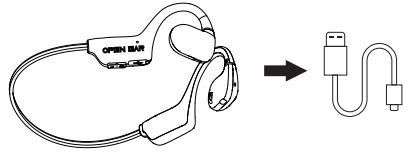 


<h1>开放式无线耳机</h1> <h2>OPENEAR Duo</h2> <p>使用说明书</p>	<h3>佩戴方式</h3>  <h3>配件清单</h3>  <p>OPENEAR Duo X1 充电线 X1 说明书 X1</p>	<h3>产品信息</h3> <p>产品型号: OPENEAR Duo 耳机类型: 开放式无线耳机 BT版本: 5.2 频率范围: 20Hz-20KHz 连接范围: ≈10米 麦克风灵敏度: -42db 电池容量: 180mAh 续航时间: ≈10小时 (80%音量) 充电时间: ≈2 小时 充电电压: DC 5V</p> <h3>按键示意图</h3>  <p>功能键- Type-c充电口 功能键+</p>
<h3>操作步骤</h3> <h4>开/关机</h4> <p>开机: 长按+键3秒, LED红蓝灯闪烁,提示音: power on pairing; 关机: 长按+键5秒, LED红灯闪烁,提示音: power off.</p> <h4>BT连接</h4> <p>打开蓝牙菜单, 选择“OPENEAR Duo” 进行连接, 提示音: connected.</p> <h4>接听/挂断/拒接来电</h4> <p>接听/挂断来电: 单击+键。 拒接来电: 双击+键。</p> <h4>播放/暂停音乐</h4> <p>单击+键。</p> <h4>上/下一曲</h4> <p>上一曲: 三击+键。下一曲: 三击-键。</p>	<h3>音量加/减</h3> <p>音量加: 双击+键。音量减: 双击-键。</p> <h3>唤醒语音助手</h3> <p>长按-键。</p> <h3>低电量提示</h3> <p>当电池低于5%时, 每隔60秒红灯闪烁1下, 低电量提示60秒循环一次, 提示音“battery low”。</p> <h3>恢复出厂设置</h3> <p>关机状态下, 长按+键10秒。</p> <h3>充电</h3> <p>请使用DC 5V的适配器进行充电, 充电中红灯常亮, 充满电蓝灯常亮。</p> 	<h3>注意事项</h3> <ol style="list-style-type: none"> 1.长时间听大音量音乐可能会带来不适感, 请尽可能使用中等左右的音量, 避免长时间使用大音量; 2.无论音量大小, 使用耳机都将影响您对周围环境的感知, 使用耳机时多加注意; 3.切勿拆除或改装耳机, 否则可能导致耳机故障或烧毁; 4.切勿抛扔、坐压耳机或将其投入火中; 5.耳机应远离火、高电压设备; 6.不合适十岁以下儿童使用, 内包含细小零件; 7.请勿将其归类为生活垃圾, 而将其送往当地相应的电器设备回收站。 <p>注意: 若用户因违反以上警告内容造成的人身财产损失, 本公司不承担任何责任。</p>

<h1>Open Ear Wireless Headphones</h1> <h2>OPENEAR Duo</h2> <p>User Manual</p>	<h3>How to Wear</h3>  <h3>What's In the Box</h3>  <p>OPENEAR Duo X1 Charging cable X1 Manual X1</p>	<h3>Specifications</h3> <p>Model: OPENEAR Duo Type: Open-Ear Wireless Headphones Version: 5.2 Frequency: 20Hz-20kHz Connection: ≈10m Microphone: -42dB Battery: 180mAh Play Time: ≈10h(80%volume) Charging Time: ≈2h Charging Voltage: DC 5V</p> <h3>Button Control</h3>  <p>Button- Type-C charging port Button+</p>
<h3>OPERATION</h3> <h4>Power On/Off</h4> <p>Power On: Press & hold the button + for 3 sec, red & blue led flash. Prompt: power on pairing. Power Off: Press & hold the button + for 5 sec, red led flash. Prompt: power off .</p> <h4>BT Connection</h4> <p>Select "OPENEAR Duo" in BT menu to connect. Prompt: connected.</p> <h4>Answer/Hang Up/Reject A Call</h4> <p>Answer/Hang Up:Click the button + once. Reject A Call: Double click the button + .</p> <h4>Play/Pause Music</h4> <p>Click the button + once.</p> <h4>Previous/Next Track</h4> <p>Previous Track: Tripple Click the button + . Next Track: Tripple Click the button - .</p>	<h3>Volume Up/Down</h3> <p>Volume Up: Double Click the button + . Volume Down: Double Click the button - .</p> <h3>Activate Voice Command</h3> <p>Press and hold the button - .</p> <h3>Low Battery</h3> <p>When battery is lower than 5%, prompt: battery low.</p> <h3>Restore Factory Setting</h3> <p>Under power-off mode, press and hold the button + for 10sec.</p> <h3>Charge</h3> <p>Please use DC 5V adapter for charging.red LED is on charging. Blue LED is on after fully charged.</p> 	<h3>Attentions</h3> <ol style="list-style-type: none"> 1.Listening to loud music for a long time may cause discomfort,please use medium volume if possible. Donot use high volume for long periods of time. 2.Using headphones will affect your perception of the surrounding environment. Pay more attention when using headphones. 3. Do not remove or modify the headphone,as this may cause damage or burn out. 4. Do not throw,twist on headphones or put them into a fire. 5.Keep it away from fire,hydratation and high pressure equipment. 6.Not suitable for children under 10-year-old containing small parts. 7.Do not classify it as household waste. Please send it to the local electrical equipment recycling station. <p>Note:The company does not assume any responsibility for the loss of personal property caused by the violation of the above warnings..</p>