

充电仓LED显示

- 四颗LED常亮, 电量100%
- 三颗LED常亮, 电量75%
- 两颗LED常亮, 电量50%
- 一颗LED常亮, 电量25%
- ※○○○ 一颗LED闪烁, 请充电。

充电

- 将耳机放入充电仓, 充电时灯常亮;
- 请使用DC 5V充电器进行充电;

唤醒语音助手

长按任一耳机2秒, 激活手机语音助手。

通话触控操作

- 接听电话: 长按任一耳机2秒
- 取消/接听/挂断电话: 单击任一耳机

音乐触控操作

- 单击任一耳机: 播放/暂停音乐
- 单击任一耳机: 下一曲
- 单击任一耳机: 上一曲
- 单击任一耳机: 双连击左耳
- 单击任一耳机: 双连击右耳

蓝牙连接

在设备蓝牙列表下选择"OPENEAR Unison"进行连接。
连接成功提示音: "connected".

OPENEAR Unison

真无线开放式运动耳机

说明书

充电

LED电量显示 Type-C充电口

L(左耳) R(右耳)

触摸功能键

佩戴示意图

将耳挂置于耳后, 向后旋转耳机, 直至它轻贴于耳朵上方。

开/关机

- 从充电仓中取出耳机, 自动开机, 提示音: Power on, pairing;
- 将耳机放回充电仓, 自动关机, 提示音: Power off.

产品参数

产品型号	OPENEAR Unison
耳机类型	真无线开放式运动耳机
BT版本	V5.3
连接范围	10米
耳机重量	23g(单耳11.4g)
耳机使用时间	12小时 (80%音量)
耳机充电时间	2小时
充电仓使用时间	可充耳机2次
充电仓充电时间	2小时
充电电压	DC 5V

重要说明

- 长时间听大音量音乐可能会带来不适感, 请尽可能使用中等的音量, 避免长时间使用大音量;
- 无论音量大小, 使用耳机都将影响您对周围环境的感知, 使用耳机时多加注意;
- 切勿拆除或改装耳机, 否则可能导致耳机故障或烧毁;
- 切勿乱扔、坐压耳机或将其投入火中;
- 耳机应远离火、高压电设备;
- 不适合十岁以下儿童使用, 内包含细小零件;
- 请勿将其归类为生活垃圾, 而将其送往当地相应的电器设备回收站;

注意: 若用户因违反以上警告内容造成的人身财产损失, 本公司不承担任何责任。

OPENEAR Unison

Open-Ear Truly Wireless Sports Headphones

User Manual

LED Power Display

Type-C Charging

L R

Touch Control

HOW TO WEAR

Slide the earhook behind your ear and rotate the earbud back until it rests gently over the top of your ear.

POWER ON/OFF

- Take the earbuds out of charging case, auto power-on. Prompt: power on pairing;
- Place the earbuds into charging case, auto power-off. Prompt: Power off.

CONNECTION

Select "OPENEAR Unison" in device's Bluetooth menu. It will voice prompt you "Connected".

SMART CONTROL

- Volume up: Touch 2x of Right earbud.
- Volume down: Touch 2x of Left earbud.
- Previous track: Touch 3x of Left earbud.
- Next track: Touch 3x of Right earbud.
- Play/pause music: Touch 1x of any earbuds.

SMART CONTROL

- Cancel/Answer/Hang Up A Call: Click once on either earbud.
- Reject A Call: Press and hold on either earbud for 2 seconds.

BATTERY CHARGING

Low Battery

OPENEAR Unison will prompt you "battery low" when battery is lower than 15%.

Charging

- Place the earbuds into charging case. The white LED is on during charging.
- Use DC5V adapter & type-C cable to charge charging case.

CHARGING CASE LED DISPLAY

- Battery 75-100%
- Battery 50-75%
- Battery 25-50%
- Battery 15-25%
- ※○○○ LED blinks, please charge.

SPECIFICATION

MODEL	OPENEAR Unison
TYPE	Open-Ear Truly Wireless
BT VERSION	V5.3
CONNECTION	10m
WEIGHT	23g (11.4g each earbud)
EARBUD PLAY TIME	12H (80% volume)
EARBUD CHARGING	2H
CASE CHARGE EARBUD	2 times
CASE CHARGING	2H
CHARGING VOLTAGE	DC 5V

Activate Voice Assistant

Hold for 2 sec on any earbuds to activate phone's voice assistant.

ATTENTION

- Listening to loud music for a long time may cause discomfort, please use medium volume if possible. Do not use high volume for long periods of time.
- Using headphones will affect your perception of the surrounding environment. Pay more attention when using headphones.
- Do not remove or modify the headphone, as this may cause damage or burn out.
- Do not throw, sit on headphones or immerse them in water.
- Keep it away from fire, hydration and high pressure equipment.
- Not suitable for children under 3-year-old containing small parts.
- Do not classify it as household waste. Please send it to the local electrical equipment recycling station.

Note: The company does not assume any responsibility for the loss of personal property caused by the violation of the above warnings.