1. Please set FD-08=00.

FD-08 is "Communication setting frequency selection"


Bit0: 0 is Percentage of maximum frequency; 1 is Set frequency directly;

Bit1: 0 is use LCD keypad or monitor software; 1 is standard keypad.


2. Put Jumper on “DL” position


-Below is the DL jumper on HV480-5R5G3 and below power rating.



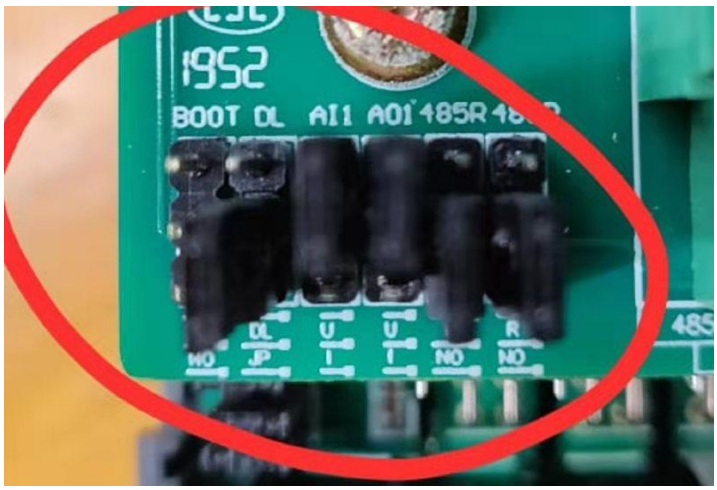

-Below is the DL jumper **(J7)** on all HV610, and HV480-7R5G3 and above power rating.

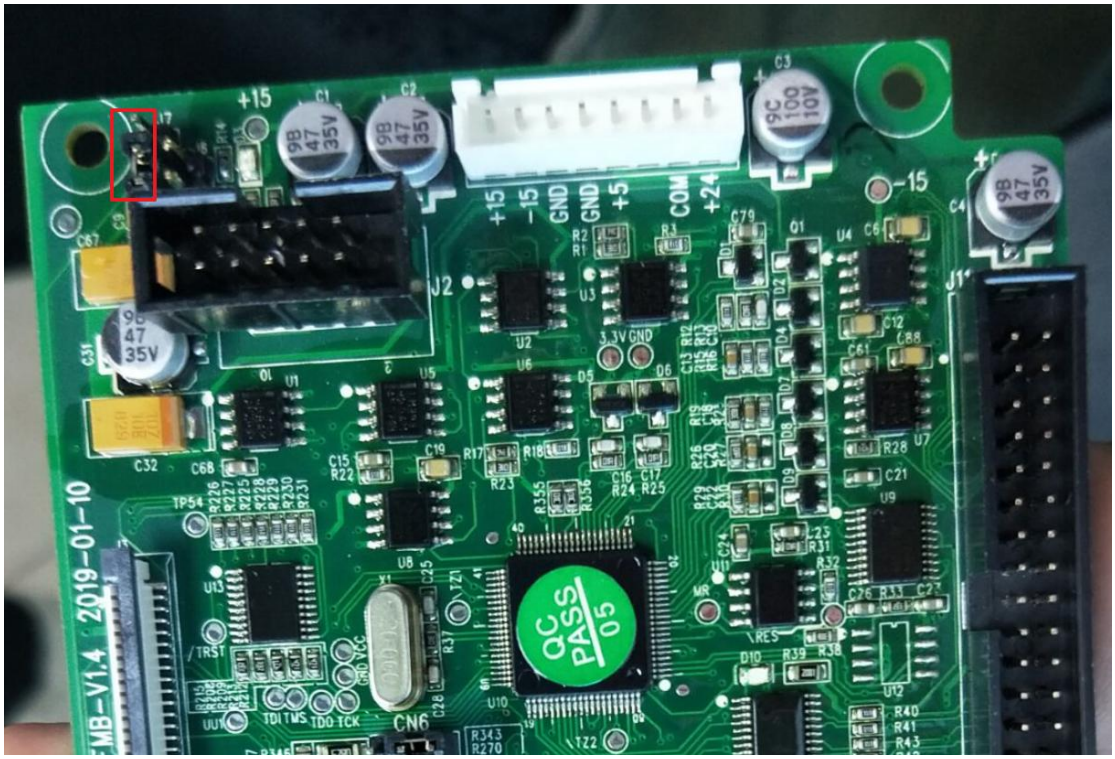

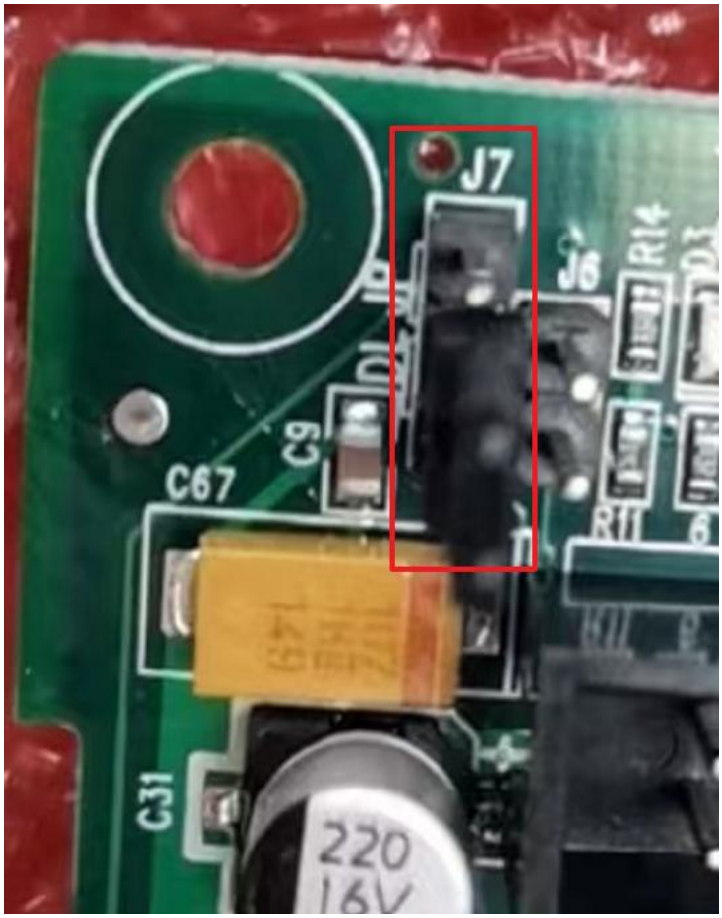

3. If the "HV610_MONITOR -EN" can't works in your PC, please install "MSVBCRT_2019.09.25" also.

4. After opening the software and connecting the HV480&HV610, select the COM port actually displayed on the computer, and use the default values for other settings （115200/1/RS232/8-N-1）.

